


Guitchordi

QUICK CONTROLS

A4 landscape / print at 100% or Fit / current simulator + experimental FM-1 control map

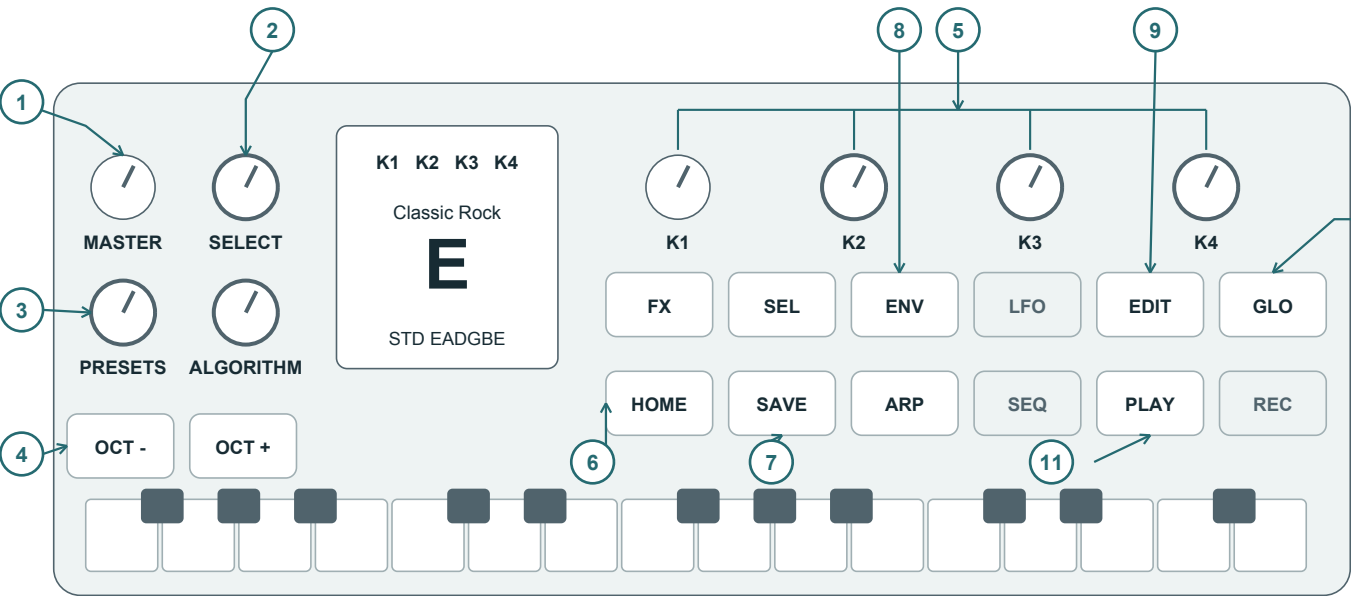

- 1

MASTER
Output volume. Start comfortably low.
- 2

SELECT
Turn for tempo: 40-240 BPM. Default 90.
- 3

PRESETS / ALGORITHM
PRESETS: chord style. ALGORITHM: instrument.
- 4

OCT - / OCT +
Shift by one octave, from -1 to +1.
- 5

K1-K4
Page-dependent parameters: use the chart below.
- 6

FX / HOME
FX: tone page <-> Home. HOME: play / cancel.
- 7

SEL / SAVE
SEL: OK / confirm. SAVE: keep browser settings.
- 8

ENV
Hold 3 seconds: lock / unlock chord and voicing.
- 9

EDIT
Tap: assign slot with PRESETS; SEL finishes.
- 10

GLO
Tap: global page. Hold 3 seconds: reset prompt.
- 11

ARP / PLAY
ARP: Freeplay > Strum > Arp. PLAY: damp all.

Hold EDIT 1.2 s: PRESETS selects Cancel / This slot / All slots.
Reset prompts: SEL confirms; HOME cancels. No instant reset.

WHAT THE FOUR KNOBS DO

PAGE / MODE	K1	K2	K3	K4
Freeplay / FX	Intensity (50% neutral)	Transpose	Shared room	Voicing of selected slot
Strum / Home	Pattern (6 choices)	Division	Gate: FREE or 25-100%	Sweep: INSTANT / 5-250 ms
Arp / Home	Pattern (6 choices)	Division	Gate: FREE or 25-100%	Swing: 0-60%
GLO	Gate tails: Off / On	Strum humanity: 0-100%	Guitar tuning (14 choices)	Rhythm velocity: 1-100%

JAM START Steel Acoustic / Classic Rock / Standard EADGBE / 90 BPM / Down / 1/8 / FREE / 50 ms sweep
Tap ARP for Strum, then hold a black chord key. Release to stop repeats; notes ring naturally. PLAY damps them.
Rhythm velocity defaults to 80%: soft 40% / normal 80% / accent 100%. GLO K4 changes it; tone intensity stays separate.
Division: 1/1 through 1/32, each straight, dotted (D) or triplet (T). FREE gate rings; GLO K1 adds tails to percentage gates.